


# Degree Template for Type I VW Crankshaft Pulley

(for installing and timing Hot-Spark SVDA 034 Electronic Distributor)

Drawn to scale. Print without scaling for actual size of pulley.

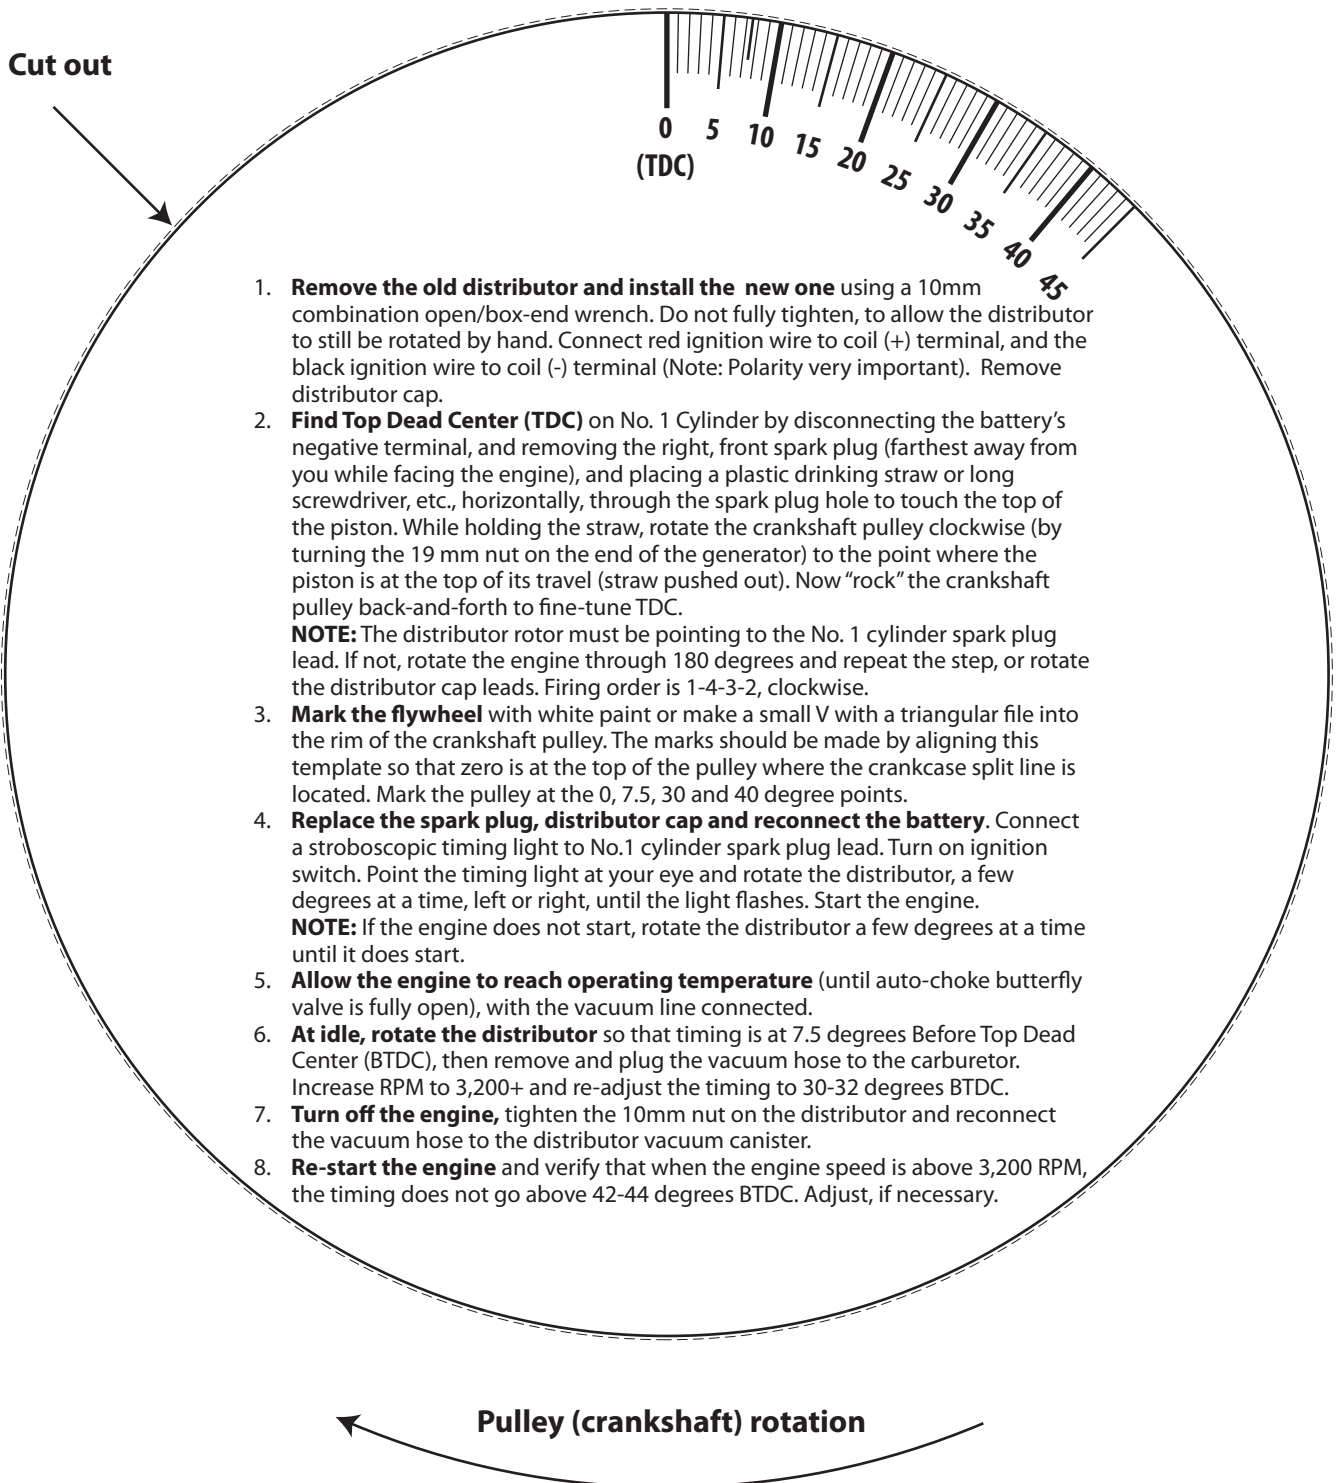

## Tools Required:

Stroboscopic timing light  
19mm wrench/spanner/socket  
10mm combination open/box-end wrench or ring spanner  
Spark plug socket, ratchet and extension  
12mm or 13mm wrench for battery terminals  
Small rod (screwdriver with 100+mm shaft or plastic soda/drinking straw)